



- 1 Power indicator
- 2 Microphone stand connector
- 3 Speaker
- 4 Headset connection indicator
- 5 Internal unit microphone mute
- 6 Power button
- 7 External unit microphone mute
- 8 Recorder jack
- 9 Power adapter jack
- 10 External unit jack
- 11 Internal unit microphone sensitivity
- 12 Internal unit speaker volume
- 13 Micro USB port
- 14 Headset jack

OPERATION

- 1) Install internal and external units on its target place. Connect external and internal unit with each other using corresponding connector (10);
- 2) Connect microphone stand to the internal unit connector (2);
- 3) Connect power adapter to the jack (9) of the internal unit and then plug the adapter into the socket. Check that power indicator (1) lights up;
- 4) Touch power button (6) one time to start conversation. Touch power button (6) again to stop conversation;
- 5) Set the internal unit volume and microphone sensitivity using knobs (11,12). If the noise occurs on the internal or external unit while talking then decrease internal unit volume or microphone sensitivity using knobs (11,12);
- 6) In case you need to record voice, connect recorder to the recorder jack (8) of the internal unit. Maximal amplitude of the signal is 1.2 V;
- 5) Touch (5) button to turn off internal unit microphone;
- 6) Touch (7) button to turn off external unit microphone.

PACKAGE

- Internal unit – 1 pc.
- External unit – 1 pc.
- Power adapter – 1 pc.
- User manual – 1 pc.

SPECIFICATION

POWER
+12 V from power adapter

POWER CONSUMPTION
Peak current - 400 mA

MOUNTING TYPE
Surface mount

INTERNAL UNIT DIMENSIONS
160×90×42 mm

EXTERNAL UNIT DIMENSIONS
Ø75×22 mm

WORKING TEMPERATURE
-10 ... +60 °C

Technical support

